

For DH Transmitter Instruction

Program to Gate / Garage Door Openers the same way as original

DH Transmitter 4 remotes, please refer to your receiver's user manual.

For a typical DH Garage Control Panel, the programming procedure is as follows:

1. Press and release the button R on the receiver.
2. The left side of display panel will show 0 then disappears immediately.
3. Press any button twice, coding is completed.
4. Press the transmitter button to test operation.

Note: To remove a single transmitter's code or all transmitter codes from the receiver memory please refer to your receiver manual.