

For DOM501/502 Instruction

Step 1. Disconnect power then reconnect power

Step 2. Press and release the PROGRAMME button 2 times.(The four LEDs will flash on and off two times after which LED#1 will be flashing or illuminating):

Step 3. If illuminated, it means a code has already been stored in this location.

Press the PROGRAMME button once again LED#2 will be flashing or illuminating.

If LED#2 still illuminated, press the PROGRAMME button once again LED#3 will be flashing or illuminating.

If LED#3 still illuminated, keep going until find one of the LEDs flashing. that means you found a vacant memory location.(indicated by flashing LED)

Step 4. When a flashing LED has been found, press and hold new transmitter button until the LED stops flashing and is illuminated. This code has now been stored in memory.

Step 5. Waiting for 10 seconds, then press the transmitter button to test if it works.(If you can't see any LED flashing, maybe the door opener has ben fully coded, then you need to delete an existing code and re-program the new remote. If any existing remote is affected, re-program that one too.)

To delete a code

1. Turn off power to the unit for 20 seconds
2. Push program button twice (e.g. push, push)
3. After several seconds all lights will flash on and off. LED 1 will come on.
 - a.if you want to delete the code in LED 1 push and hold the "Program button" down until the light starts to flash. The code is now wiped.
 - b.You may then (by pushing the program button once) cycle through each LED light and delete where required