

**For Novoferm Remote Instruction**  
**E41/43-U**

1. Press the learning button on receiver until LED flashes, then hold button on transmitter down for approx. 3 seconds until LED on receiver flashes rapidly.
2. Repeat this procedure for any further hand transmitters, up to 60 transmitter codes can be taught in. (the receiver can be compatible with 60 pcs remotes)
3. If transmitter has encoding switch, not all switches should be in the same setting, the receiver will not accept this for safety reasons.
4. Deleting hand transmitter codes at receiver :

Press receiver button until LED stops flashing, all hand transmitter codes are not deleted. It is not possible to delete individual hand transmitter codes.