

## **For M802 Instructions**

- 1.** Unscrew the small screw at the back of the new remote and remove the small tab from the battery.
- 2.** Open your original remote (if you do not have one, please remove the tab at the back of your motor which is labeled 'code dip switches' or remove the light cover of the motor to find the switches.
- 3.** Change the switches of the new remote to match either your old remote or your motor.
- 4.** Close the remote and test.