

For Telis Instruction

- 1) On already programmed Original Telis RTS remote (for Telis 4 RTS remotes, first select the channel you wish to duplicate), press the hidden programming button on the back of the remote until the motor jogs (short shades up and down movement).
- 2) On replacement remote, press buttons 3 and 4 simultaneously, until red LED on the remote will start flashing. Then release buttons 3 and 4.
- 3) On replacement remote, press any desired button you wish to program.
- 4) The shades will jog (short shades up and down movement) confirming, that the new remote has been programmed successfully.

HOW TO DELETE A PROGRAMMED REMOTE:

- 1) On already programmed Original Telis RTS remote, press the hidden programming button on the back of the remote until the motor jogs (short shades up and down movement).
- 2) On replacement remote, press buttons 3 and 4 simultaneously, until red LED on the remote will start flashing. Then release buttons 3 and 4.
- 3) On replacement remote, press the button you wish to delete.
- 4) You have successfully deleted the programmed channel.