


PROGRAMMING THE REMOTE CONTROL

Press and hold the program button the remote control until the LED on the front of the remote control turns on.

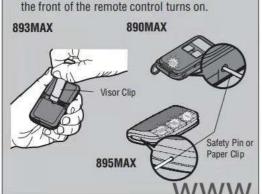

Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type:

# of Presses	Garage Door Opener Type
1	Security+ 2.0™ (Yellow Learn Button)
2	315 MHz Security+® (Purple Learn Button)
3	390 MHz Security+® (Red/Orange Learn Button)
	390 MHz Billion Code (Green Learn Button)



To exit programming mode, press program button 2 times quickly , the led blink once to confirm selection.

eg: 890MAX



